replaces the following Liftmaster/Chamberlain TX's:

81LM GREEN SMART BUTTON
971LM/973LM RED/ORANGE SMART BUTTON
371LM/373LM PURPLE SMART BUTTON
MyQ YELLOW SMART BUTTON

Use a paper clip or safety pin to press the PROGRAM BUTTON on the transmitter.


Press and release the SMART BUTTON on the Garage Door Operator.

Press and Release the appropriate transmitter button, look for the Operator Light to go on within 2 sec.

If not, Press and Release the same transmitter button, look for the Operator Light to go on within 2 sec. (repeat until the Operator Light blinks-then stop pressing this transmitter button.

To exit programming Press & Release ANY OTHER transmitter button

Test by Pressing appropriate button

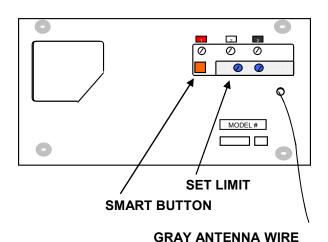

We have parts for ALL major brands of Doors and Operators

## Liftmaster 893MAX / 890MAX







Location
of
Program
Button
on
Transmitter